



## NTL ADP KIT

### FOR NTL10X OEM MODULES FAMILY

#### Overview





## CONTENTS

1 NTL ADP KIT PACKAGE CONTENTS.....	3
2 NTL ADP KIT CONNECTION DIAGRAM.....	4
3 ANTENNA SPECIFICATIONS.....	6
CONTACTS.....	7

## 1 NTL ADP KIT PACKAGE CONTENTS

For a quick and easy set up GNSS receiver OEM modules and rapid testing, take advantage of NTL Adp Kit.

The NTL Adp Kit includes everything you need to work with the navigation OEM modules of the NTL10X family or other OEM modules form-factor and pinout compatible.

### *NTL Adp Kit package contains\*:*

- NTL Adp Board – 1pcs. (A);
- Survey Antenna HX-CSX608A – 1pcs. (B);
- TNC male to SMA male, 5m – 1pcs. (C);
- SMA female to MMCX male cables – 2pcs. (D);
- USB standard A to mini-B cable – 1pcs. (E);
- Documentation set;
- Packaging.



Figure 1.1 – NTL Adp Kit package contents


---

\*The package contents can be changed by the supplier. Please, visit [www.ntlab.it](http://www.ntlab.it) for actual information on the package contents.


## 2 NTL ADP KIT CONNECTION DIAGRAM

*Complete the following steps:*


- NTL Adp Board have sets of four standoffs. Remove the top set of four nuts.

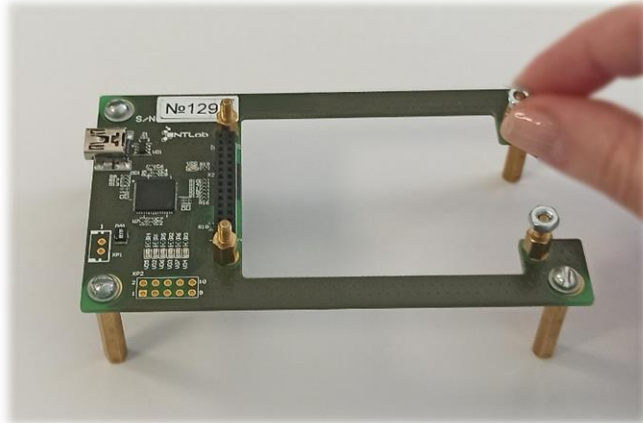


- Place the NTL10X OEM module on the standoffs so the pin header on the OEM module faces downward and fits into the mating pin header on the NTL Adp Board.

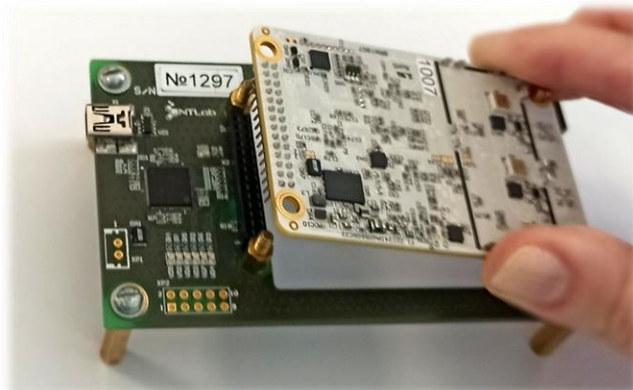

- Attach the nuts you removed in step above to secure the OEM module to the NTL Adp Board (hand-tighten only).

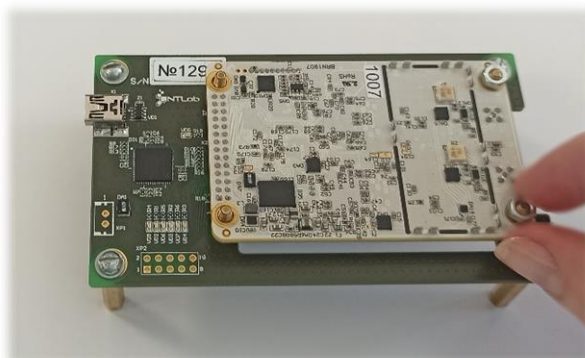

- Connect an external HX-CSX608A antenna to the NTL10X OEM module using C\* and D\* cables.
- Connect the E\* cable to X1 NTL Adp Board connector and to a USB port on your PC.
- Install CP210x drivers on computer for NTL Adp Board. The drivers are available from:  
<https://www.silabs.com/products/development-tools/software/usb-to-uart-bridge-vcp-drivers>
- Run NTL Browser for development, diagnostic testing and demonstrate the OEM module work results. NTL Browser is a software tool designed to communicate with NTL10X. It is available on NTLab company FTP server. Link (password and login) may be provided on request.

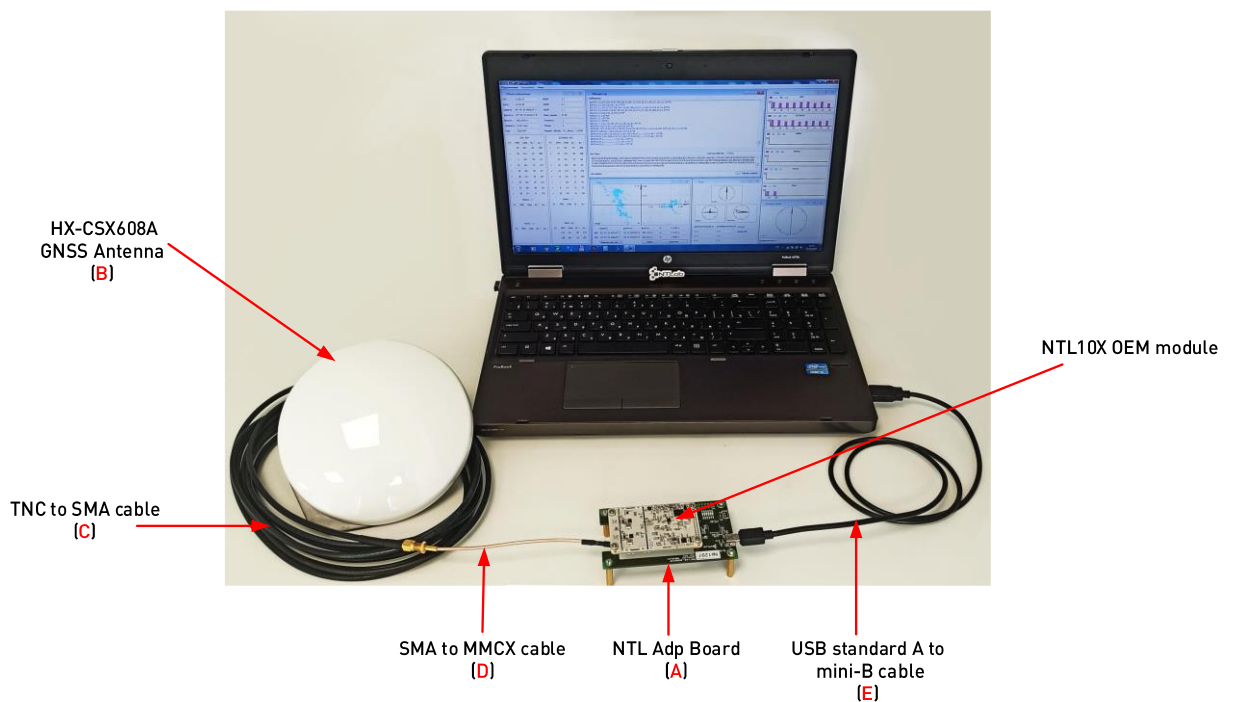

---

\* See figure 1.1

### 3 ANTENNA SPECIFICATIONS\*

#### ***Applications:***

HX-CSX608A is a multiple constellation full-frequency external surveying antenna, to meet the current surveying equipment of high precision, multiple constellation compatibility requirements. It can be widely used in geodetic surveying, marine surveying, waterway surveying, dredging surveying, seismic monitoring, bridge deformation monitoring, landslide monitoring, dock container operation and other occasions.

#### ***Main electrical antenna specifications:***

- Frequency Range: GPS L1/L2/L5, GLONASS L1/L2, BeiDou B1/B2/B3/S-band, Galileo E1/E5a/E5b; NavIC L5/S-band, SBAS;
- Impedance: 50ohm;
- Polarization: RHCP;
- Axial Ratio:  $\leq 3\text{dB}$ ;
- Azimuth Coverage:  $360^\circ$ ;
- Output VSWR:  $\leq 2.0$ ;
- Peak Gain: 5.5dBi;
- Phase Center Deviation:  $\pm 2\text{mm}$ ;
- Noise Figure:  $\leq 2.0\text{dB}$ ;
- LNA Gain:  $40\pm 2\text{dB}$ ;
- Operation Current:  $\leq 65\text{mA}$ ;
- Operation Voltage: 3.3...12V DC;
- Group Delay:  $\leq 5\text{ns}$ .

#### ***Mechanicals & Environmental:***

- Dimension:  $\Phi 173.4*62.6\text{mm}$ ;
- Connector: TNC Female;
- Operating Temperature Range:  $-40^\circ\text{C}$  to  $+85^\circ\text{C}$ ;
- Weight:  $\leq 550\text{g}$ .

---

\* According to the product datasheet

## CONTACTS

For complete contact information visit us at [www.ntlab.lt](http://www.ntlab.lt)

### Office

NTLAB, UAB

Švenčionių g. 112, Nemenčinė, LT-15168 Vilniaus r., Lithuania

Tel.: +370 6 169 5418

e-mail: [sales@ntlab.lt](mailto:sales@ntlab.lt)

